## **Basin Waste**

## **Installation**

Remove the bottom seal and nut from the waste thread.

Place the waste through the hole in the basin, the seal provided can be used between the waste flange and the basin or alternatively sealing compound should be used.

Once the waste is placed through the hole in the basin apply a sealing compound around the underside of the basin and the into the waste tail threads, then fit the second seal and nut onto the waste thread and tighten to underside of the basin.

Cleaning of the waste should only be done using a clean damp cloth, no abrasive cleaning agents or materials should be used or this will invalidate your guarantee

