

Important Technical Data

Min/Max Hot Water Pressure: 0.5 / 5.5 bar
Min/Max Cold Water Pressure: 1.0 / 5.5 bar

Maximum domestic hot water temperature 70°C*
Recommended hot water temperature 46°C

Note: If these temperatures or pressures are exceeded, even for short periods, damage can result. In these instances a thermostatic mixing or pressure reducing valve should be installed.

All Abode taps are either WRAS approved or manufactured in accordance with recognised European standards. Please ensure that your Abode Kitchen mixer is fitted in accordance with Local Water Byelaws.

These installation guidelines have been prepared for your direction and you must exercise due care at all times. We do not accept responsibility for problems that may occur through improper installation. Whilst assembling the tap take care not to accidentally loosen any screwed assemblies.

Abode is a registered trademark of Abode Home Products Limited.

Manufacturers Product Reference

PT1001
PT1002
PT1003
PT1004

©Abode
04/2016

PROFILE & PROJECT Monobloc Tap



5 Year warranty Terms and Conditions

In the unlikely event that you should experience any defect in the materials or workmanship of your new Abode mixer within 5 years of purchase, the purchaser's sole remedy shall be the replacement (at the manufacturer's discretion) of all or any part of the product that is defective. All working parts and valves are guaranteed for a period of 5 years from purchase. Decorative surface finishes and O-rings are guaranteed for 1 year from the date of purchase provided that our advice concerning care has been observed and no scouring agents have been used. This is provided that the mixer or tap has been used for normal domestic purposes and that the care, installation and maintenance instructions have been observed. The warranty extends to the original purchaser only.

Marks, scuffs and scratches caused by improper installation or accidental damage are not covered by this guarantee. Neither are shade variations or any damage or defect caused by incorrect installation or abuse of the fitting.

Note: Please see 'ProBoil installation guide' for warranty details on boiler.

Care instructions for your kitchen sink tap

To maintain the appearance of this product, ensure that it is regularly cleaned only using a clean, soft damp cloth. A solution of warm water and a mild liquid detergent may be used where necessary, and then the fitting rinsed thoroughly and wiped dry. Any other cleaning action will invalidate your warranty.

If the mixertap has a diffuser it should be unscrewed and cleaned periodically in warm water.

Abrasive cleaners, scouring cleaners and acidic cleaners **must not be used** under any circumstances. Avoid contact with all solvents (including chlorinated solvents, ketones or acetones as these may result in surface deterioration or etching). Also avoid contact with any harsh household chemicals such as oven cleaners, drain cleaners, rust removers, paint strippers and toilet bowl cleaners, bar keepers friend or Brasso.

Please leave these instructions for your customer.

PRONTEAU™

Abode Home Products Limited, Unit L, Zenith Park, Whaley Road, Barnsley, S75 1HT.

Pronteau Service Centre Tel: **0344 5765596**

All errors and omissions excepted.

Parts and Contents

Key	Description	Qty
A	Mixer tap	1
B	Upper seal	1
C	White triangular plate (for steel sinks only)	1
D	Lower gasket	1
E	Metal horseshoe	1
F	Hollow fixing stud	1
G	Fixing nut	1
H	10mm Fibre seal	1
I (X1)	Filtered water adaptor nut	1
J (X2)	Hot flexi tail	1
K (X3)	Cold flexi tail	1
L	NRV (hot) (pre-installed)	1
M	NRV (cold) (pre-installed)	1
N (X4)	Boiler data connection	1
O (X5)	Boiler flexi tail	1
P	14mm Fibre seal	1
N/A	'Hotkey' (not shown)	2

Installation Instructions:

Preparation

! Before installing the new mixer it is essential that you thoroughly flush through the supply pipes in order to remove any remaining solder, swarf or impurities from your system. Failure to carry out this simple procedure could cause problems or damage to the workings of the mixertap.

We strongly recommend installing particle filters and isolation valves to both the hot and cold feed pipes in an accessible position. This will help to prevent premature failure of the valves and ease any future maintenance.

✓ (5b) All parts should be removed from their packaging and inspected for any transport damage and all parts are present prior to installation.

Shut off your water heating system and ensure that your mains stopcock is closed. Open the lowest hot and cold taps in the house and allow the water to run until the cold-water storage tank and pipes are fully empty. Please note, the hot water storage cylinder (if applicable) will always remain full.

This mixertap requires a 35mmØ tap hole, if replacing an existing tap, remove the tap & clean the end of the feed pipes using wire wool the tap hole area should be free from dirt and sealant. There needs to be a minimum 60mm gap between the tap hole centre and the back wall/splash. Loosely position the tap and tail pipes to check if any alteration to the existing pipework is required, if this is the case do this now. This tap is designed to be installed in a worktop with a maximum thickness of 40mm.

Installation

1. Screw the hollow fixing stud (F) into the base on the tap using a spanner or 6mm allen key. Note: the drawing identifies water inlets.
2. Screw the hot and cold flexi tails (J & K) into the base of the tap (A). Hand tighten fully only.
3. Screw boiler flexi tail (O) into base of tap (A). Hand tighten fully only.
4. Place the upper seal (B) on to the base of the tap (A).
5. Place the tap (A) centrally and straight to the tap hole, passing the hollow fixing stud (F), tail pipes (J, K & O), and boiler data connection (N) through the sink.

Note: Take special care not to pull or trap data connection (N).

6. Pass the lower gasket (D) then the metal horseshoe (E) over the hollow fixing stud (F). Note: if the tap is to be fitted to a stainless steel sink then the white triangular plate (C) can be fitted where shown to improve the stability of the tap.
7. Using a spanner tighten fixing nut (G) onto the hollow fixing stud (F), a box spanner or small basin wrench will help if one is available.
8. Place fibre washer (I) into adaptor (H), tighten the adaptor (H) with its flats nearest to the tap onto the hollow fixing stud (F).
9. Leave hotkeys (Q) in their bags and safe for the customer to find after testing the ProBoil installation.
10. Please refer to 'ProBoil installation guide' for the next steps for installation

After installation

Once you have visually checked the new fittings and connections, ensure that all taps are closed except the new mixer tap which should be left open. Turn on the water supply at the mains stop cock. As the system starts to refill, check carefully for leaks. Once you are fully satisfied that there are no leaks, turn on the water heating. Clean the tap to remove any marks created during installation as instructed.