

Maintenance

Replacement of Headwork

Note:

Water supply must be turned off before commencing replacement.



REPLACEMENT OF CARTRIDGE

Turn off the valves to release pressure of waterpipe. Unscrew the ceramic cap(1) and remove the screw(2) with a screwdriver. Take out the handle(3) and plastic ring(4). Then disassemble the dome(5)(use tool if needed). Take out the cartridge upward vertically. Assemble a new cartridge by reverse steps.