


Pullout Kitchen Faucet Installation

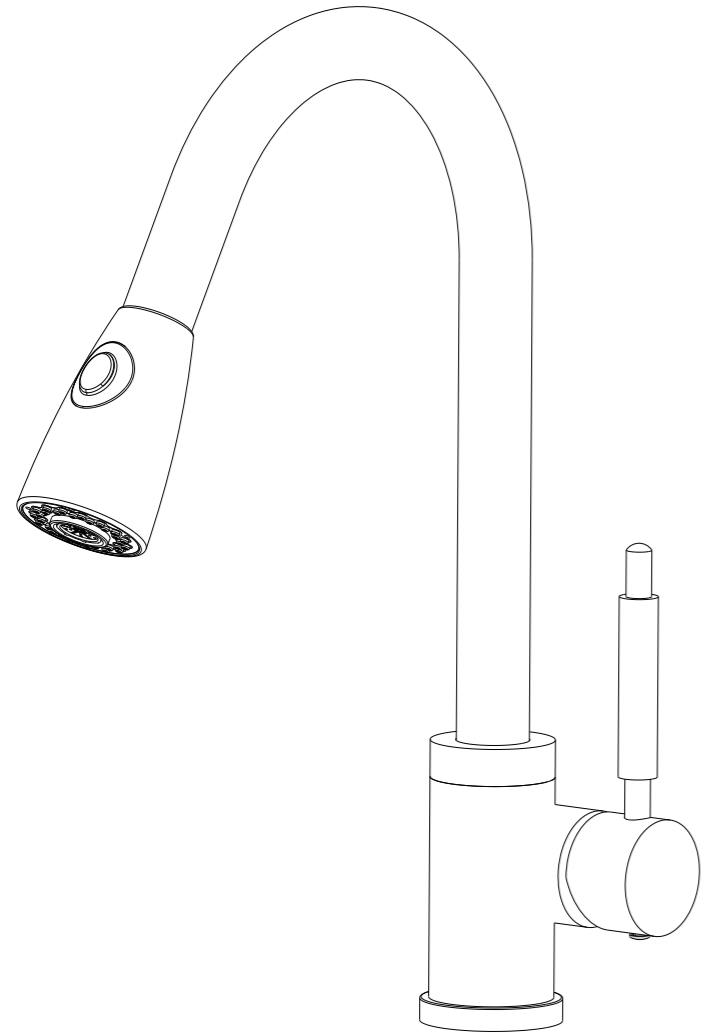



<p>Product Specification</p> <p>Minimum Pressure 1.0bar Maximum Pressure 6.0bar</p>	<p>NOTE: ISOLATION VALVE NOT SUPPLIED</p>

Counter Balance Pullout Spout

<p>①</p>	<p>②</p>
----------	----------

<p>③</p>	<p>④</p>
<p>⑤</p>	<p>⑥</p>

Spring Load Pullout Spout

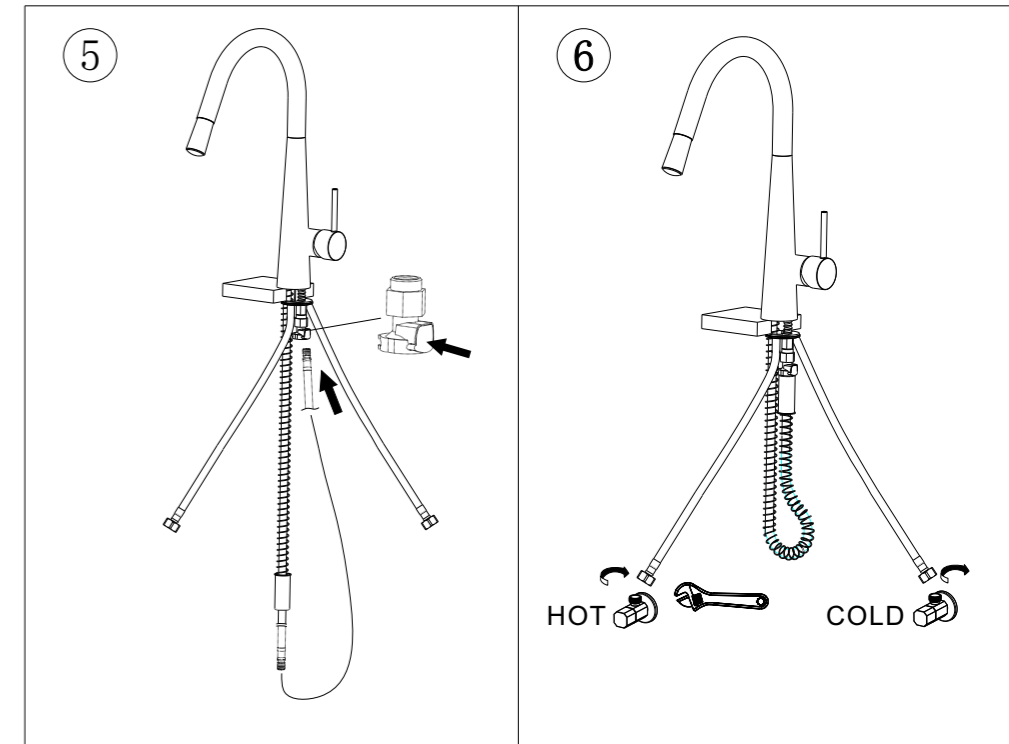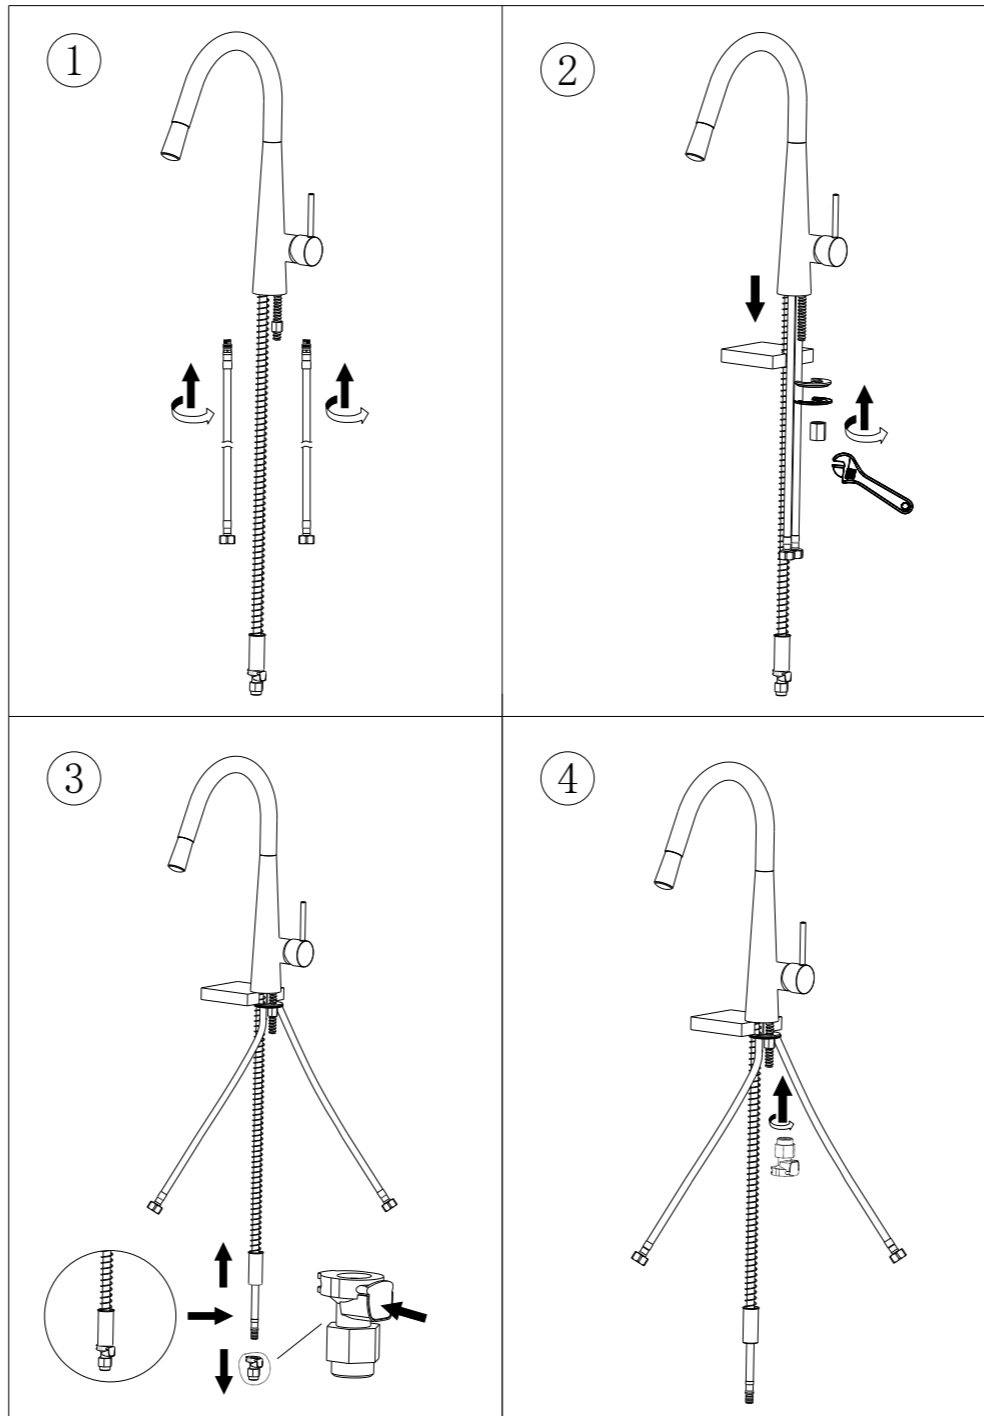


Cleaning

All surfaces should be cleaned using a clean damp cloth. No abrasive cleaning agents or materials should be used.

Flexible Connecting Pipes

Care must be taken when connecting the flexible connection pipes to the household pipework to ensure they do not bend sharply and kink or twist.

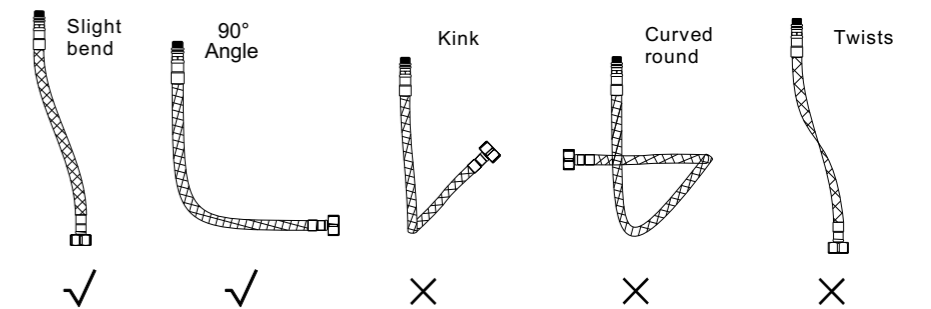

⚠ Important: Failure to follow these guidelines may result in poor performance and damage to the flexible connecting pipes.