



## Troubleshooting

Symptom	Cause	Rem
No flow or low flow rate	Partially closed isolation valve.	Ope
	Instantaneous water heater cycles on and off as flow rate or pressure is too low.	Incre
	Head of water is below the minimum distance required.	Refe
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do r
	Airlock or partial blockage in the supply pipework.	Flusl and
Water dripping from taps	This is normal for a short time after using the taps.	This of w
	If water continues to drip, possibly due to the ceramic disc valves	Rem secti
Taps do not turn on	Closed isolation valve.	Ope
	Mains water supply turned off.	Turn

## Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.



At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register to register your product via a computer. For full guarantee terms and conditions visit www.bristan.com/guarantees.

iedy

en isolation valve.

ease water flow rate or pressure through system.

er to specification for minimum distance required.

not use other water outlets when using the taps.

sh through pipework to ensure removal of debris any airlocks.

is caused by residual water tension, the build up vater in the tap body.

nove valves and clean, refer to 'Maintenance' tion before starting any maintenance.

en isolation valve.

n on mains water supply.

