


electriciQ

USER MANUAL

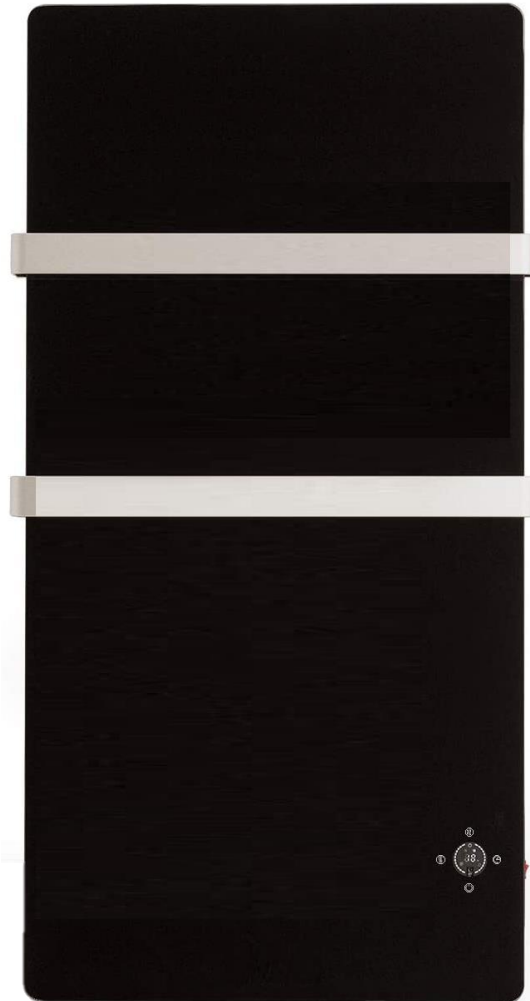

DESIGNER GLASS PANEL HEATER WITH TWO TOWEL RAILS

VG2TR-1.2BW
VG2TR-1.2WW

Thank you for choosing electriciQ

Please read this user manual before using this heater and keep it safe for future reference.
Visit our page www.electriQ.co.uk for our entire range of Intelligent Electricals

SETTLING IN OK?

We hope this has been helpful to you.

We would love to see how you're getting on with your new purchase, so please share any snaps you have on the platform of your choice below.

Our community awaits your uploads - Snap, tag and hashtag away!



@electriQUK

#electriQUK

WE'RE HERE TO HELP

Should you have any problems or questions with your purchase, please contact a member of our customer service team.

☎ 0330 390 3061

✉ support@electriQ.co.uk

Mon-Fri | 9am to 5pm

Unit 2A, Trident Business Park,
Neptune Way, Leeds Road,
Huddersfield, HD2 1UA

CONTENTS

SAFETY INSTRUCTIONS	4
PARTS SUPPLIED	6
ATTACHING THE TOWEL RAILS	6
INSTALLING WITHIN A BATHROOM	7
INSTALLATION	8
OPERATION	9
REMOTE CONTROL	10
CONNECTING YOUR APPLIANCE TO WI-FI	11
REGISTER THE APP	12
CREATING ROOMS	13
QUICK CONNECTION	14
AP MODE CONNECTION	15
USING THE APP	16
HOME SCREEN	16
DEVICE SCREEN	17
SMART SCENES	18
AUTOMATION	19
CONNECTION TROUBLESHOOTING	20
MAINTENANCE	21
TROUBLESHOOTING	21
TECHNICAL DATA	22
SUPPORT	22
PRODUCT FICHE	23

SAFETY INSTRUCTIONS

IMPORTANT


- Carefully read the instructions before operating the unit
- This appliance is for indoor use only.
- Rating: This unit must be only connected to a 220-240 V, 50/60 Hz earthed outlet.
- Installation must be in accordance with the regulations of the country where the unit is used.
- If you are in any doubt about the suitability of your electrical supply have it checked and, if necessary, modified by a qualified electrician.
- This heater has been tested and is safe to use. However, as with any electrical appliance - use it with care.
- Disconnect the power from the unit before dismantling, assembling or cleaning.
- Avoid touching any moving parts within the appliance.
- Never insert fingers, pencils or any other objects through the guards.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be carried out by children.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, or clean the appliance or perform user maintenance.
- Children under 3 years should be kept away unless continuously supervised.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- Do not clean the unit by spraying it or immersing it in water.
- Never connect the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician.
- Never operate this appliance if the unit, cord or plug is damaged. Ensure the power cord is not stretched, exposed to sharp object/edges, or routed under the unit.
- Any service other than regular cleaning should be performed by an authorised service representative. Failure to comply could result in a voided warranty.
- Never use the plug as a switch to start and turn off the heater. Use the provided power switch on the side of the unit.
- Do not use an external timer.
- Do not cover the air inlet or outlet, or place items close to the unit which may restrict airflow, as this may present a fire risk.
- The heater must not be located immediately below a socket outlet.
- Always ensure the unit is secure before operation. It must be securely attached to a suitable wall.
- Do not move or tilt the unit.

- Avoid keeping the unit in direct sunlight for a long period of time.
- The heater is designed to be used at temperatures above -20°C. If it is exposed to temperatures below this, it must be allowed to warm above this level before operation.
- Do not attempt to repair, disassemble or modify the appliance. This unit contains no user-serviceable parts.
- Always unplug or disconnect the appliance from the mains power supply when not in use, or when moving or cleaning it. Do not pull the cord to unplug the heater.
- Keep the heater clean. Do not allow any object to enter the ventilation or exhaust opening as this may cause electric shock, fire, or damage to the heater.
- Do not use the appliance for anything other than its intended use. It is designed for domestic indoor use only.
- There may be a trace of odour during the first few minutes of initial use, or after a period of storage. This is normal and will quickly disappear.
- This appliance has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or any flammable liquids are used or stored.
- Never locate this appliance where it may fall into a bathtub or otherwise become exposed to water.
- This appliance is IP24 rated, and so can be used or installed within a bathroom as long as the appliance and its cables are not within Zones 0-2.
- If used within a bathroom, the circuit must be protected by a suitable RCD to prevent electric shock.
- Do not allow the appliance to be submerged or sprayed with water.
- The appliance must be installed in accordance with current regulations for the area of installation. If unsure, professional advice should be sought.
- If electrical work is carried out within the bathroom which involves addition or alteration of existing circuits, it may be notifiable to your local building control department (Part P). If unsure, professional advice should be sought.
- **WARNING:** To reduce the risk of fire or electrical shock, DO NOT use this appliance with any solid-state Speed Control Device or any variable speed controllers.
- The remote contains a lithium battery, keep out of reach of small children. Seek medical advice if swallowed.
- To prevent battery leakage: Remove the battery from the remote if exhausted or before long periods of storage.
- It is the installers responsibility to ensure that the wall plugs and screws provided are suitable for the type of wall, alternative fittings can be used if required.

ENERGY SAVING AND UNIT SAFETY PROTECTION TIP

- Do not cover or restrict the airflow. Do not use in a dusty environment.


PARTS SUPPLIED

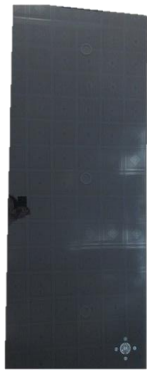


HEATER



TOWEL RAILS X2

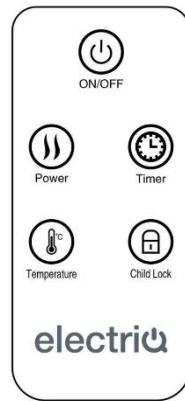

REMOTE CONTROL

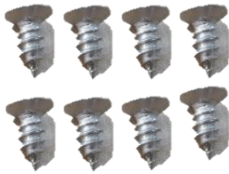

SCREWS (A) X8
(FOR TOWEL RAILS)



SCREWS (B) X2
(FOR LOWER BRACKET)



WALL PLUGS X3



UPPER BRACKET X2




LOWER BRACKET



SCREWS (C) X3
(FOR WALL)


ATTACHING THE TOWEL RAILS

Before installing your heater, secure the towel rails onto the heater using the screws (A) provided, secure the two towel rails onto the unit through the holes on either side of the heater.

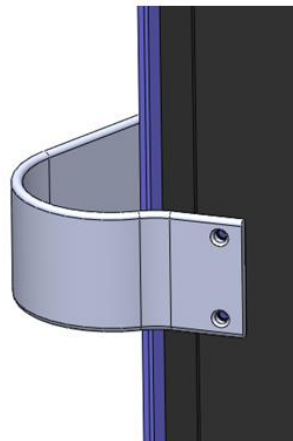

INSTALLING WITHIN A BATHROOM

If the appliance is to be fitted within a bathroom, a good understanding of the zoning within bathrooms is required to ensure the unit is mounted in a safe position. The appliance is rated as IP24 and should be installed outside of Zones 0-2. We would advise when the unit is fitted within a bathroom, the plug is removed from the unit, and a suitable fused spur used. In addition when used in a bathroom, it must be protected by a suitable RCD to prevent the risk of electric shock.

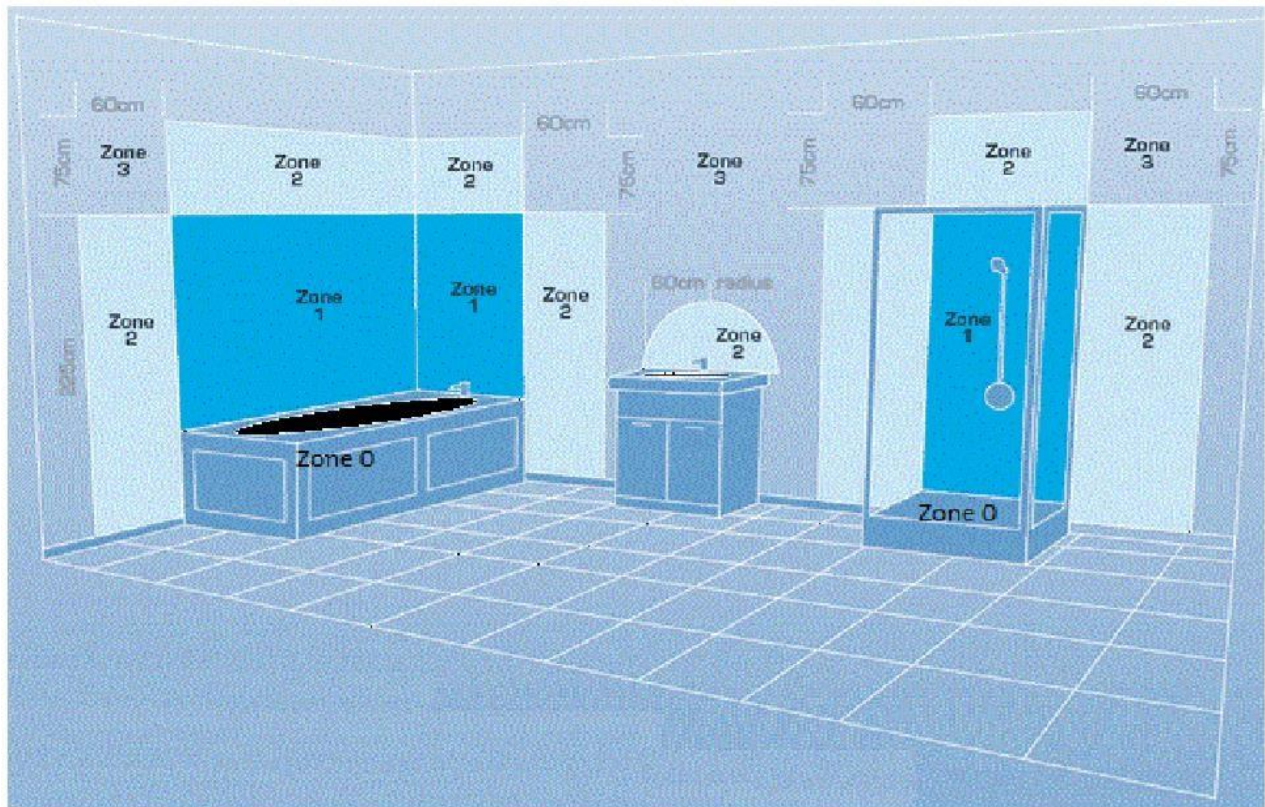

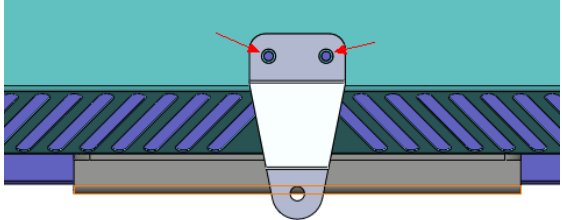
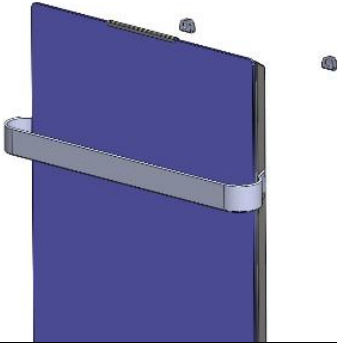
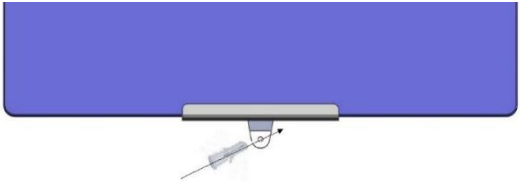


Zone 0:	The interior of the bathtub or shower basin.
Zone 1:	The area around the bathtub or shower basin up to a height of 2.25m above the floor
Zone 2:	The area stretching to 0.6m outside the bath or shower and above the bath or shower if over 2.25m


INSTALLATION



 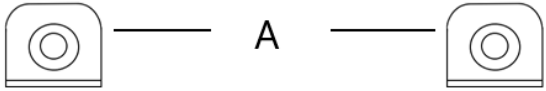


The heater must be installed at least 60cm from the floor.

IMPORTANT: Before drilling, ensure that no wires or pipes are behind the wall to prevent damage. If unsure, professional advice should be sought.

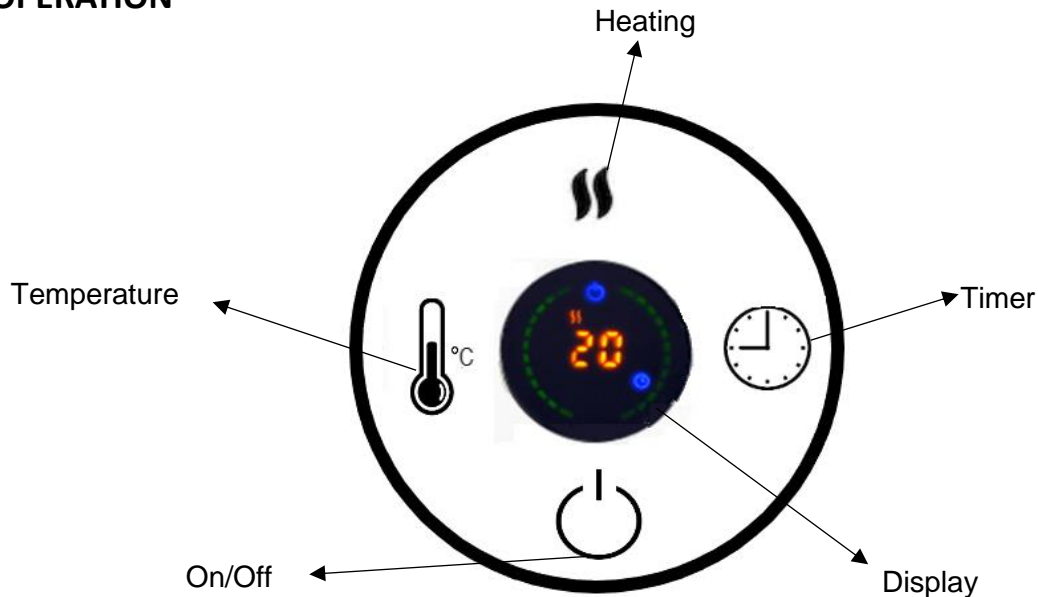




<p>Step 1</p>	<p>Measure the distance between the hooks on the back of the heater. Make a note of the measurement, and mark two points on the wall that distance apart at the desired height, using a spirit level to ensure that the unit will be straight following installation.</p>	
<p>Step 2</p>	<p>Drill two holes into the wall at the marked positions and insert the wall plugs provided. Place the upper brackets onto the wall, ensuring that the side with the smaller sized hole is flush against the wall, and that the open end is facing upwards. Secure the brackets to the wall using the screws (C). Ensure that the brackets are firmly fixed before commencing onto the next step.</p>	
<p>Step 3</p>	<p>On the bottom of the unit, secure the lower bracket using the 2 screws (B).</p>	
<p>Step 4</p>	<p>Carefully hang the heater onto the two upper brackets, and mark where the final screw hole for the lower bracket meets the wall. Gently remove the appliance from the wall and drill a hole in the position marked. Insert a wall plug before placing the heater back on the hanging brackets.</p>	
<p>Step 6</p>	<p>Once the heater is in position, screw the support bracket to the wall using the final screw (C).</p>	


OPERATION



<p>ON/OFF</p> 	<p>When the heater is plugged in (And switched on using the power switch on the side), use the ON/OFF button to turn the appliance on. The display will show the current room temperature.</p> <p>Press and hold the ON/OFF button for 5 seconds to lock or unlock the control panel (only the power button will work while locked).</p>
<p>HEATING</p> 	<p>Press the HEATING button to turn the heating element on and off. When the element is set to on, the unit will heat when the desired temperature is above the room temperature. The heating symbol  will be shown on the display. When the element is set to off, the unit will not provide any heating.</p> <p>Press and Hold the HEATING button to reset the unit and activate the WiFi.</p>
<p>TEMPERATURE</p> 	<p>Repeatedly press the TEMPERATURE button to choose the desired room temperature (between 5-40°C). After pressing the button, the first time, the unit will show the desired temperature to allow adjustment, repeatedly press to move between the available temperatures. After a few seconds of no input, the display will return to showing the current room temperature.</p>
<p>TIMER</p> 	<p>The inbuilt timer will allow you to set the unit to turn on or turn off after a set period of time, please note only one timer can be used at any time.</p> <p>ON TIMER – The timer will turn on the unit automatically after the time set has elapsed.</p> <ol style="list-style-type: none"> 1. While in standby, repeatedly press the timer button to set the duration 2. Once the set time has elapsed, the unit will turn on automatically. 3. Press the ON/OFF button before the time has elapsed and the unit will turn on as normal and the timer will be cancelled <p>OFF TIMER – The timer will turn off the unit automatically after the time set has elapsed.</p> <ol style="list-style-type: none"> 1. While the unit is operating, repeatedly press the timer button to set the duration 2. Once the set time has elapsed, the unit will turn off automatically. 3. Press the ON/OFF button before the time has elapsed, the timer will be cancelled and the unit will turn off.

REMOTE CONTROL


 ON/OFF	<p>When the heater is plugged in (And switched on using the power switch on the side), use the ON/OFF button to turn the appliance on.</p>
 Power	<p>Press the POWER button to set whether the heater produces heat. On: Appliance will heat when the desired temperature is above the room temperature. "☹" will be displayed on the appliance. Off: The heating element is turned off and the unit will not heat.</p>
 Timer	<p>The inbuilt timer will allow you to set the unit to turn on or turn off after a set period of time, please note only one timer can be used at any time. This is programmed the same was as the timer on the unit itself.</p>
 Temperature	<p>Repeatedly press to change the desired room temperature.</p>
 Child Lock	<p>Press to turn on the child lock, and disable to controls on the heater. Press again to turn off the child lock.</p>

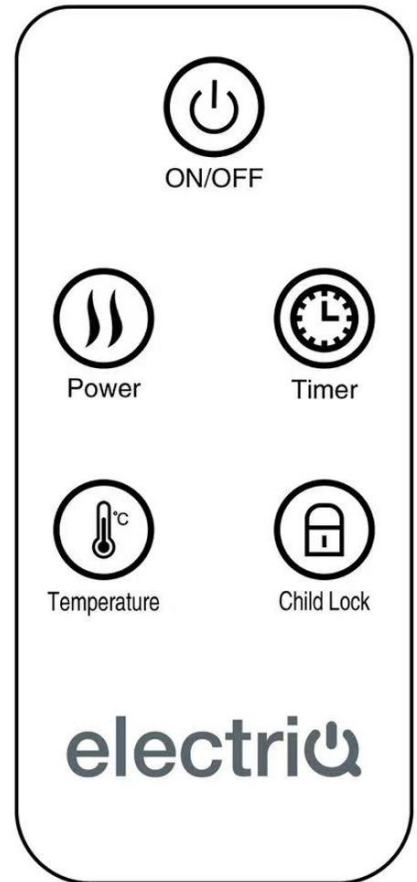

REPLACING THE BATTERIES

The remote control is powered by a Lithium Button Cell Battery (CR2025). Should the remote become unresponsive, replace the battery following the instructions below:

1. Turn over the remote and press tab A to the right.
2. Slide out the battery tray B.
3. Replace the battery with the same type, ensuring the positive side is facing upwards.

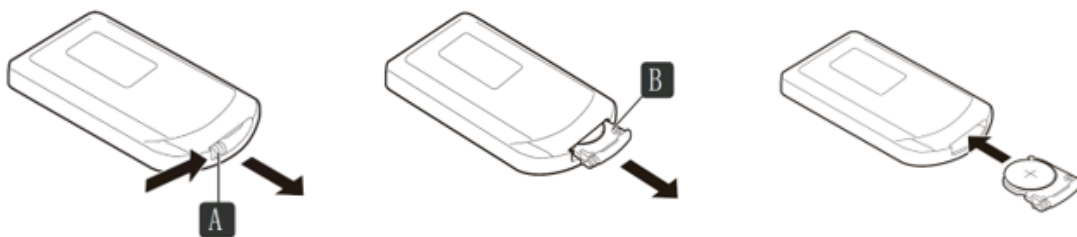

CONNECTING THE APPLIANCE TO WIFI

DOWNLOAD THE APP TO YOUR PHONE

Download the "TUYA SMART" app, from your chosen app store, using the QR codes below, or by searching for the app in your chosen store.



ANDROID



IOS

MODES AVAILABLE FOR SETUP

The heater has two different setup modes, Quick Connection and AP (Access Point). The quick connection is a quick and simple way to set the unit up. The AP connection uses a direct local WiFi connection between your phone and the heater to upload the network details.

To turn the WiFi on press and hold the HEATING button for 3-5 seconds until the heater bleeps. The WiFi symbol will flash quickly to indicate the unit is in quick connection mode

Please ensure your device is in the correct WiFi connection mode for the connection type you are attempting, the flashing WiFi indicator on your heater will indicate this.

Connection Type	Frequency of Flashes
Quick Connection	Flashes twice per second
AP (Access Point)	Flashes once per second


CHANGING BETWEEN CONNECTION TYPES

To change the unit into AP mode, with the appliance in Quick Connection Mode, press and hold the HEATING button for 3-5 seconds until the heater bleeps.


To change back to Quick connection mode, press and hold the HEATING button for 3-5 seconds until the heater bleeps.

REGISTER THE APP


1. Press on the register button at the bottom of the screen.

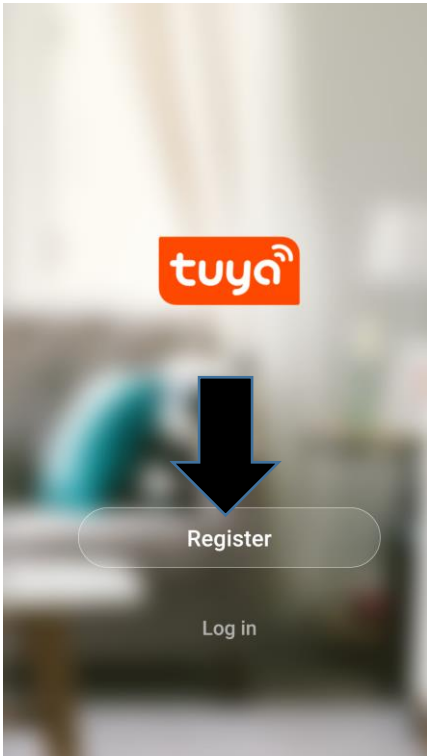


2. Read the Privacy policy and press the Agree Button.

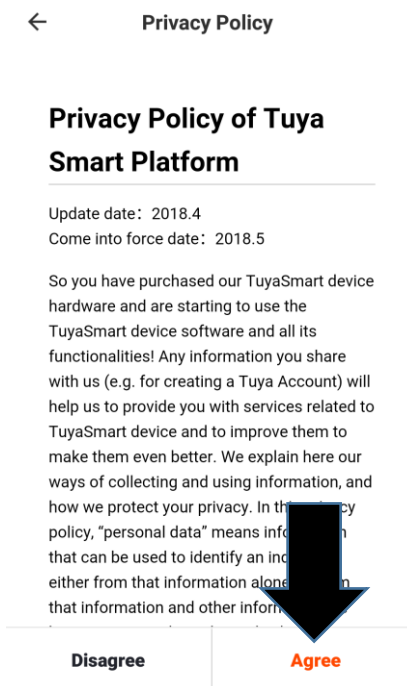


3. Enter your email address or phone number and press continue to register.

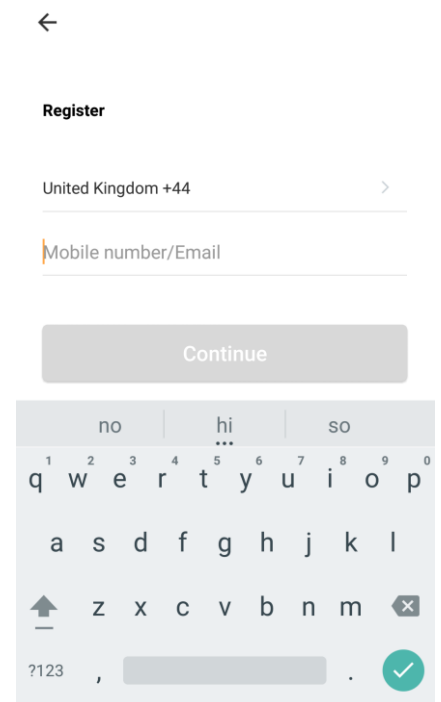


4. A verification code will be sent by the method selected in step 3. Enter the code into the app.

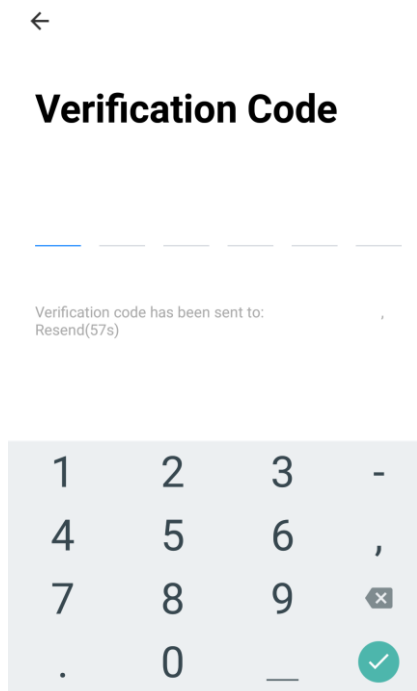

5. Type in the password you would like to create. This needs to be 6-20 characters, with letters and numbers.

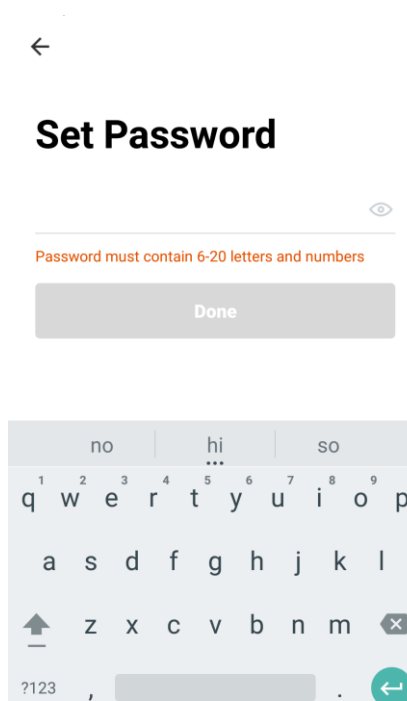



6. The app is now registered. It will automatically log you in following registration.


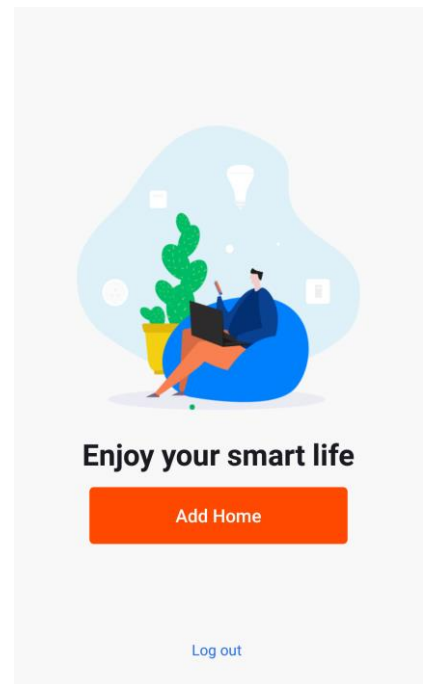


SETTING UP YOUR HOME WITHIN THE APP

TUYA is designed so it can work with a large number of compatible smart devices within your home. It can also be set up to work with multiple devices within different houses as such during the setup process, the app requires that different areas are created and named to allow easy management of all your devices. When new devices are added, they are assigned to one of the rooms you have created.

CREATING ROOMS

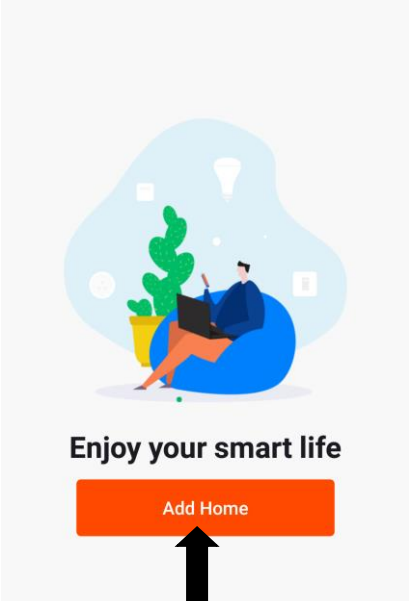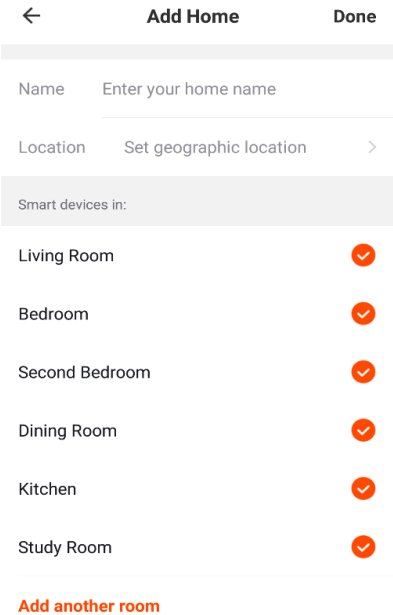
<p>1. Press on the ADD HOME button.</p> 	<p>2. Type in a name for your home, 3. Press on the location button to select the location of your home. (See SETTING YOUR LOCATION below) 4. New rooms can be added by pressing the ADD ANOTHER ROOM option at the bottom. (See ADD ANOTHER ROOM below) 5. Untick any rooms that are not required on the app. 6. Press DONE in the top right corner.</p> 
--	--
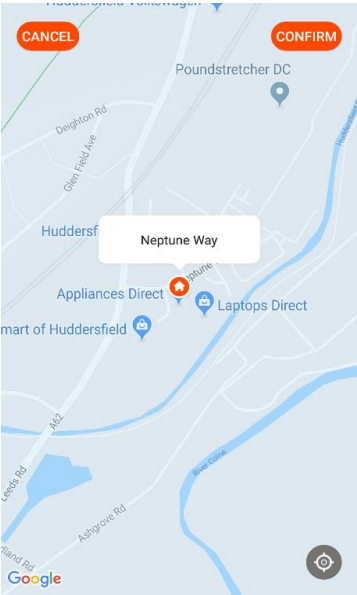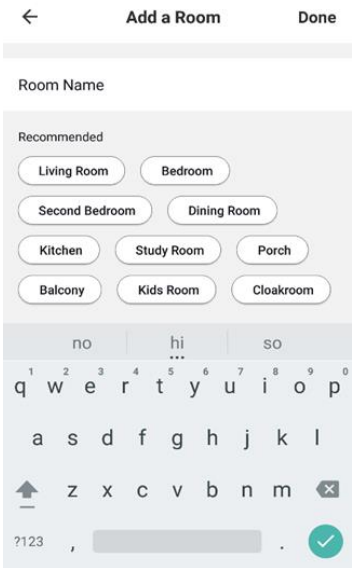
<h3>SETTING YOUR LOCATION</h3> <p>Use your finger to move the orange HOME symbol.</p> <p>When the symbol is in the approximate location of your home, press the confirm button in the top right corner.</p> <p>Location details allows the app to be set up later to respond to weather conditions in your area.</p> 	<h3>ADD ANOTHER ROOM</h3> <p>Type in the name of the room, and press Done in the top right corner</p> 
--	---


CONNECTING USING THE QUICK CONNECTION METHOD

Before initiating the connection, make sure the WiFi indicator is flashing twice per second. If not follow the instructions for changing the connection mode. Also ensure your phone is connected to the WiFi network. (We advise turning mobile data off during setup)


1. Open app and press “+” to add device, or use the add device button

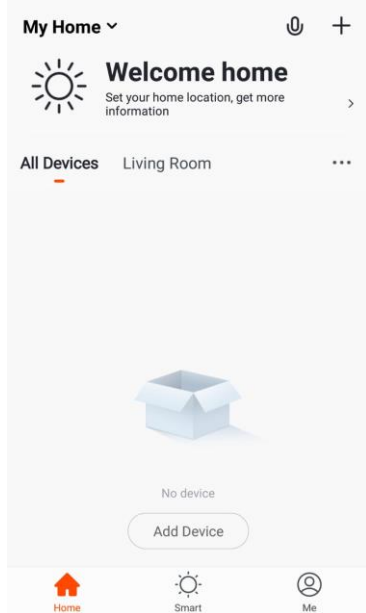


2. Select the type of device as “Heater” within the Home Appliance tab.

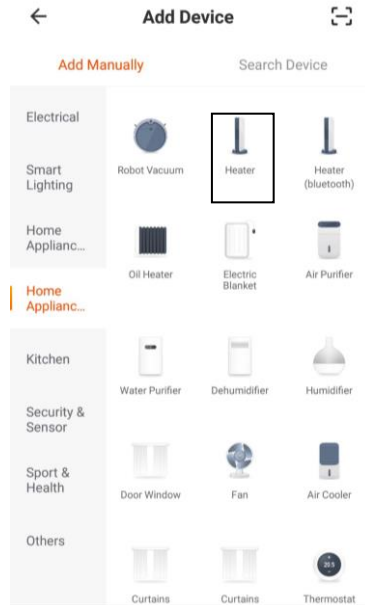


3. Press on the orange button at the bottom of the screen.

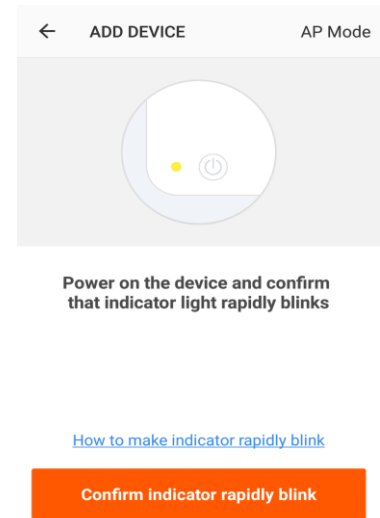

4. Enter your Wi-Fi password and press confirm.

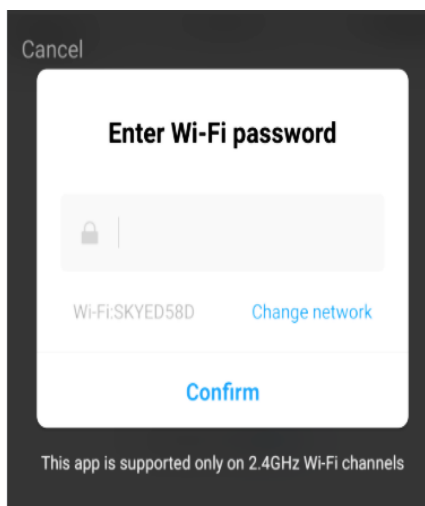


5. This will then transfer the settings to the heater. Wait for this to complete. If this fails, retry.

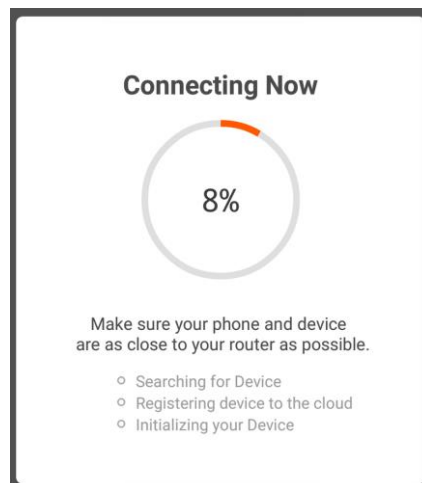


CONNECTING USING AP MODE (ALTERNATIVE METHOD)

Before initiating the connection, make sure the unit is in standby mode, with the WiFi Indicator flashing once per second. If not follow the instructions for changing the WiFi connection mode. Also ensure your phone is connected to the WiFi network. (We advise turning mobile data off during setup)


1. Open app and press “+” to add device, or use the add device button

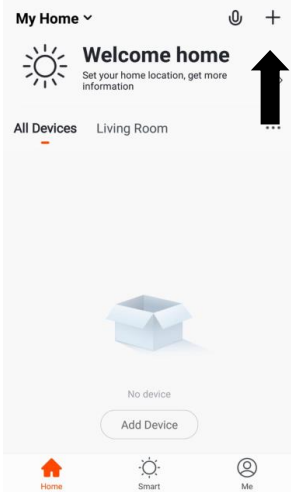


2. Select the type of device as “Heater” within the Home Appliance tab.

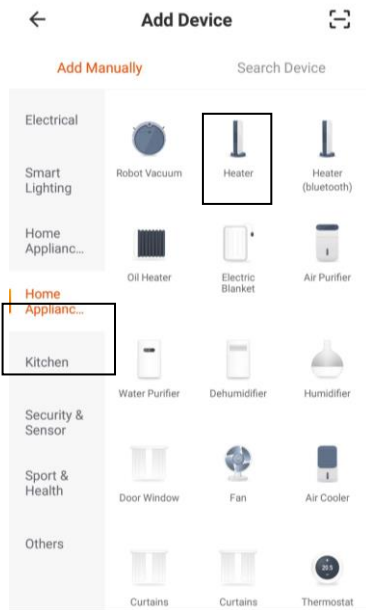


3. Press on the AP mode button in the top right of the screen.

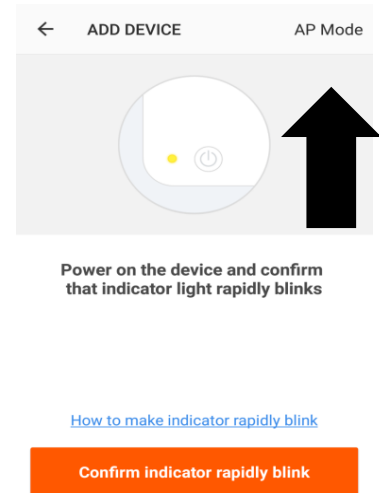


4. Ensure the WiFi indicator on the heater is slowly flashing (once per second), then press on the orange button at the bottom of the screen to confirm

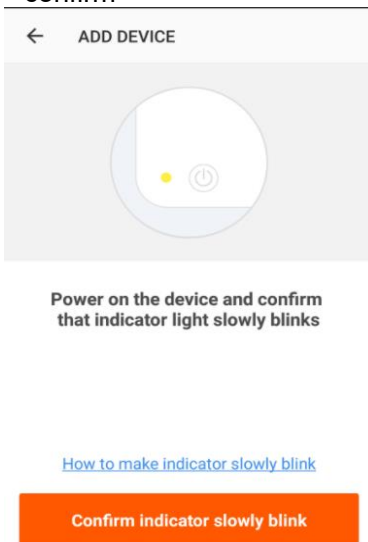

5. Enter your WiFi password and press confirm.

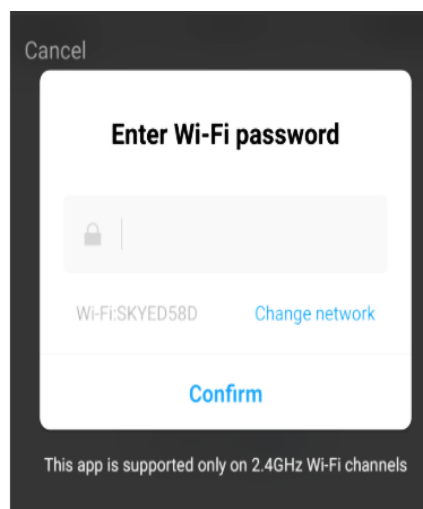

6. Go to network settings in your phone and connect to the “SmartLife xxx” connection. There is no password to enter. Then return back to the app to complete setup.

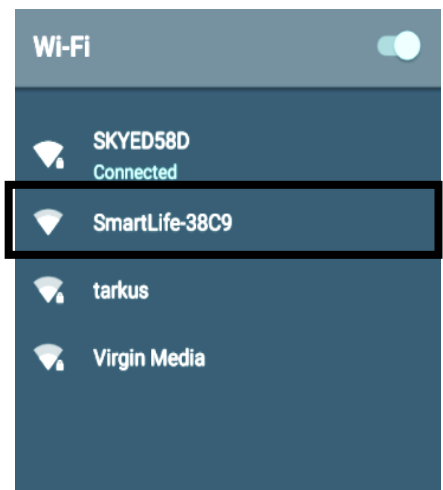

This will then transfer the settings to the heater.

Once the connection process has completed, go back to the network settings on your phone to ensure your phone has reconnected to your WiFi router.


CONTROLLING YOUR APPLIANCE THROUGH THE APP

THE HOME SCREEN

Each device has its own entry on the home screen to allow the user to either quickly turn the unit on or off, or to enter the device screen to make other changes.

Voice Control: Press to give verbal instructions for operation.

Add Device: Add a device to the app, and go through the setup process.

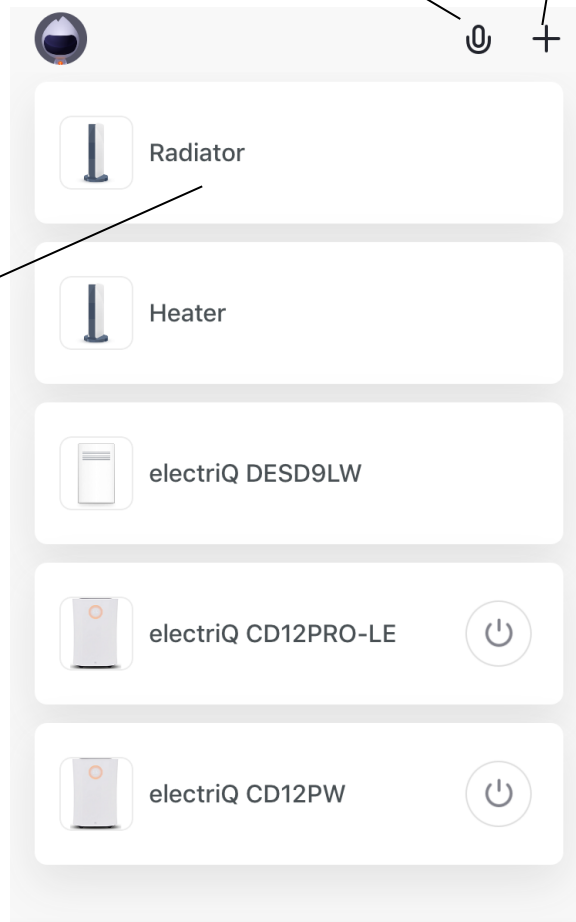

Name of Heater: Press to enter the Device Screen

Home: Return to home screen from the Smart Scene and Profile screens

Smart Scene: Allows you to program intelligent behaviour based on the internal and external environment

Profile: Provides the option for changing settings,

DEVICE SCREEN

The device screen is the main control screen for the heater, providing access to the controls to amend the functions and settings.

Back: Returns to the Home Screen

Device Name

Device Profile: Use to change the name of the heater

Desired Temperature:

Desired Temperature:

Displays what has been set as the target room temperature.

Current Room Temperature:

Current Room Temperature:

Displays the current temperature.

Decrease Desired Temperature

Temperature range 5-40C

Increase Desired Temperature

Temperature range 5-40C

WEEKLY TIMER:

Use to program the heater to change the operation and desired temperature throughout the week.

COUNTDOWN TIMER:

Use to add an off timer while the unit is running, or an on timer while the unit is turned off



Power: Use to turn the unit on or off.

OPEN/CLOSE:

Open: Heating element works when room temperature is below desired temperature.

Close: Heating element turned off (No Heating)

CHILD LOCK:

Use to lock the controls on the heater.

NOTE: Due to continuous development of the app, the layout and available features may be subject to change.





SMART SCENES

Smart Scenes is a powerful tool providing the option to customize the operation of the air heater based both on conditions within the room and outside influences. This gives the user the option of specifying much more intelligent actions. These are split into two categories Scene and Automation.

SCENE







Scene allows for a one touch button to be added to the Home Screen. The button can be used to change a number of settings in one go, and can change all the settings within the unit. A number of scenes can easily be setup, allowing the user to easily change between a number of preset configurations.

Below is an example of how to set up a scene:
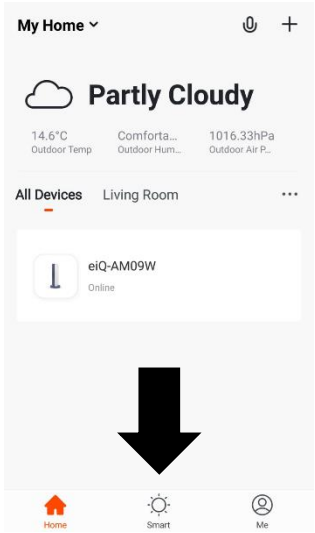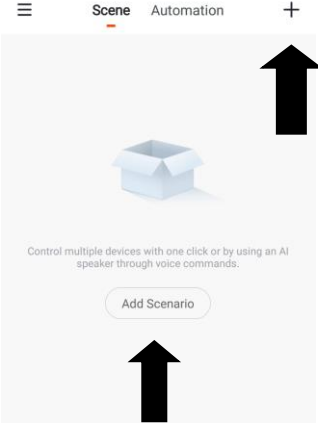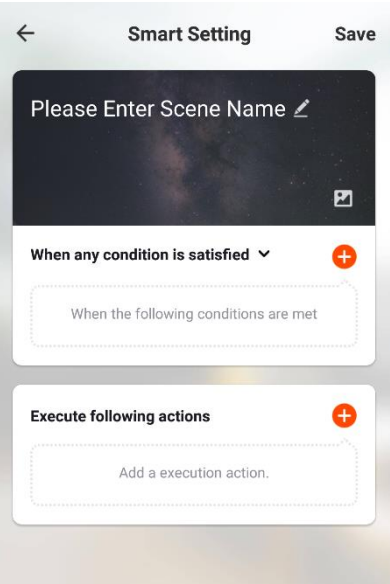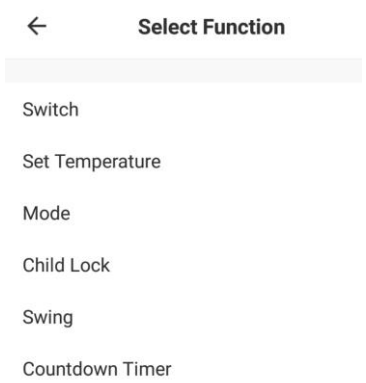
<p>1. Press on the Smart tab at the bottom of the Home screen</p> 	<p>2. Press on the Plus in the top right corner or on Add Scenario to add a smart scene.</p> 
<p>3. Press the Pen next to "Please Enter Scene Name" to input the name for your Scene</p> <p>Show on Dashboard: Leave this on if you require the scene to be displayed as a button on the Home Screen</p> <p>Press the Red Plus to add the action required. Then select the heater from the list of devices.</p> 	<p>4. Chose the function, set the value for the function, and then press the back button in the top right corner, to return to the previous screen.</p> 
<p>5. Once all the functions required have been added, press the Save button in the top right corner to finalize and save your new Scene. It will then be saved to the home screen</p>	

AUTOMATION

Automation allows an automatic action to be set up for the device. This can be triggered by the Time, and a range of other influences, depending what other TUYA enabled devices you have on the network.
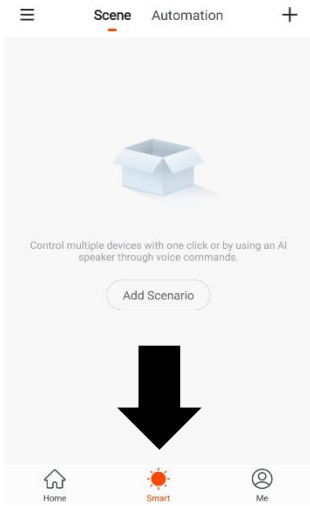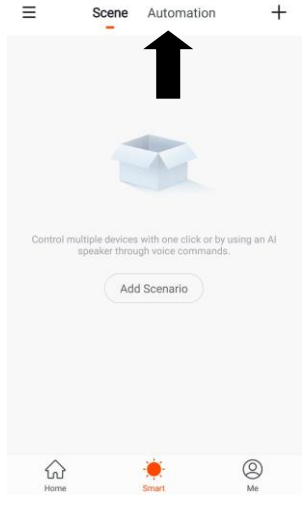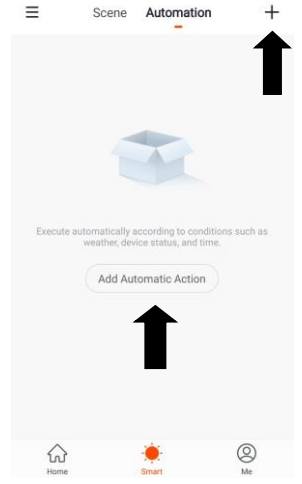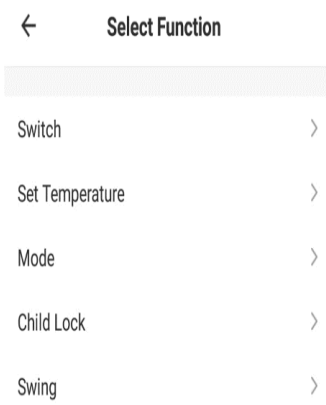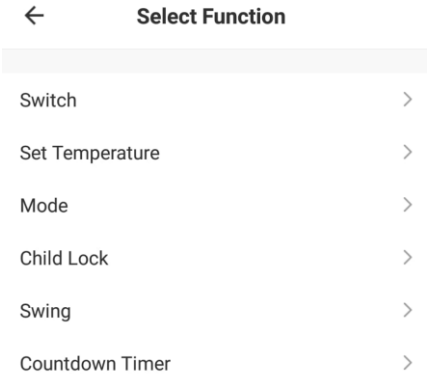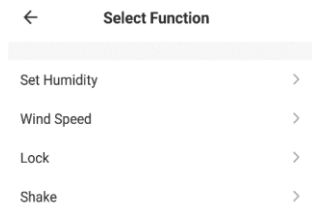
<p>1. Press on the Scene tab at the bottom of the Home screen</p> 	<p>2. Press on the Automation tab at the top of the screen.</p> 	<p>3. Press on the + at the top of the screen or press on Add Automatic Action</p> 
	<p>4. Setup is very similar to the scene setup on the previous page, and includes an extra section for specifying a trigger for the scene to start.</p> <p>Press the Pen next to “Please Enter Scene Name” to input the name for your Scene</p> <p>Press the Red Plus next to “When any condition is satisfied” to add the trigger</p> <p>Press the Red Plus next to “Execute following actions” to add the action required. Then select the heater from the list of devices.</p>	 <p>5. Select the condition when the automation should start. A number of triggers can be combined.</p>
<p>6. Chose the function, set the value for the function, and then press the back button in the top right corner, to return to the previous screen.</p> 	<p>7. Once all the functions required have been added, press the Save button in the top right corner to finalize and save your new scene.</p> <p>The automation is now set up, it can be turned on and off using the toggle on the home page.</p>	

PROFILE TAB



The profile tab gives you the option to edit both your detail, and use the added features of the unit.



Click here to set ni... >

HOME MANAGEMENT



Home Management >

Home Management provides options for managing your TUYA account, giving options such as adding a home, adding and removing rooms, and sharing devices with family.



Message Center >

MESSAGE CENTRE

View notifications from devices, if alarms are set up (dependent on device)



Help Center >



More Services >

HELP CENTRE

Provides assistance using the features provided within the app



Settings >



Home



Smart



Me

MORE SERVICES

This allows the unit to be integrated with your favorite home automation hardware such as Google Home and the Amazon Echo.

CONNECTION TROUBLESHOOTING

1. Check whether the device is powered on and is in the correct WiFi connection mode, if not please refer to the CHANGING BETWEEN CONNECTION MODES section.
2. Ensure the WiFi password has been entered into the app correctly (Case sensitive)
3. Check that the phone is connected to the WiFi you are connecting the device to.
4. Ensure the network you are connecting it to is 2.4Ghz (5Ghz WiFi networks are not supported), and that there is a strong WiFi signal to the item.
5. If your router is dual band, ensure that the 2.4ghz network has a different network name (SSID). Further advice on changing router settings will be available from your Internet service provider / Router manufacturer.
6. Check the settings on the router. Encryption should be WPA2-PSK and authorisation type should be set to AES
7. Try using the alternative connection method. i.e. If connection is failing when attempting to connect through CF mode, try AP mode.

MAINTENANCE

CLEANING AND STORAGE

ATTENTION: Please shut off the unit and unplug from the mains before cleaning or performing any maintenance.

CLEANING THE SURFACE

Clean the heater with a duster or a soft wet cloth.

Do not use chemical solvents (such as benzene, alcohol or gasoline) as they may cause irreversible damage. Make sure no water enters the control panel or gaps in the casing.

Do not run the unit until completely dry.

Place the heater in its original box or cover to protect it from dust when not in use.

Store it in a cool, dry place.

TROUBLESHOOTING

Do not repair or disassemble the unit by yourself; unauthorized repair attempts will invalidate the warranty and may cause bodily harm.

Issue	Possible Reason	Solution
No power	<ol style="list-style-type: none">1. The power cord is unconnected2. There is no power from the socket3. The power switch on the rear of the unit is turned off.	<ol style="list-style-type: none">1. Connect the power cord2. Check socket is turned on3. Ensure the power switch on the rear of the unit is in the on position
Odour emission from the unit	<ol style="list-style-type: none">1. New unit. When the unit is used for the first time the fan motor may produce an odour which will dissipate within a week of use	<ol style="list-style-type: none">1. No action required
Strong vibrations and noise	<ol style="list-style-type: none">1. The Unit is not placed on a flat surface2. The unit may be damaged	<ol style="list-style-type: none">1. Place on a flat surface. May put an anti-vibration mat underneath2. If the heater is damaged discontinue use and contact the service centre.

If the above solutions do not resolve the problem please contact the service centre.

EU DECLARATION OF CONFORMITY

Hereby, electriQ declares that this heater follows Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<https://www.electriQ.co.uk/FILES/DOC/CE/VG2TR12W-CE.pdf>

UK DECLARATION OF CONFORMITY

Hereby, electriQ declares that this heater follows the relevant statutory requirements. The full text of the declaration of conformity is available at the following internet address:

<https://www.electriQ.co.uk/FILES/DOC/UKCA/VG2TR12W-UKCA.pdf>

TECHNICAL DATA

Model no.	VG2TR-1.2WW / VG2TR-1.2BW
Power	600/900/1200W
Voltage	220-240V
Frequency	50/60Hz
IP Rating	IP24
Model colour	White/ Black
Product dimensions	120*46*6cm

electriQ UK SUPPORT

www.electriQ.co.uk/support

Please, for your own convenience, make these simple checks before calling the service line.

If the unit still fails to operate call: 0330 390 3061 or complete the online form

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait three minutes to see if the issue is resolved. Restart the unit.

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk
Unit 2A, Trident Business Park,
Neptune Way, Huddersfield,
HD2 1UA

APPENDIX

Disposal: Do not dispose of this product as unsorted municipal waste. Collection of such waste must be handled separately as special treatment is necessary.




Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centres.



BATTERY WARNING

KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

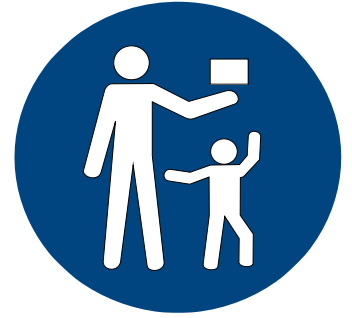

- If the battery compartment (if applicable) does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed, or placed inside any part of the body, seek immediate medical attention

THERE MAY BE NO OBVIOUS SYMPTOMS OF BATTERY INGESTION

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe). There are no specific symptoms associated with this. The child might:

- cough, gag or drool a lot;
- appear to have a stomach upset or a virus;
- be sick;
- point to their throat or stomach;
- have a pain in their abdomen, chest or throat;
- be tired or lethargic;
- be quieter or more clingy than usual or otherwise "not themselves";
- lose their appetite or have a reduced appetite; and
- not want to eat solid food / be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.

A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help.

The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.

PRODUCT FICHE

Model Identifier: VG2TR-1.2WW / VG2TR-1.2BW					
Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input, for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1.2	kW	manual heat charge control, with integrated thermostat	No
Minimal heat output	P _{min}	1.08	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max}	1.26	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	e _{lmax}	-	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	-	kW	single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	-	W	two or more manual stages, no room temperature control	No
				with mechanical thermostat room temperature control	No
				with electronic room temperature control	No
				with electronic room temperature control plus day timer	No
				with electronic room temperature control plus week timer	Yes
Other control options (multiple selections possible)					
				room temperature control with presence detection	No
				room temperature control, with open window detection	No
				with distance control option	No
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact Details	electriQ, Unit 2A, Trident Business Park, Neptune Way, Huddersfield, HD2 1UA. Buy It Direct, The Black Church, St Mary's Place, Dublin 7.				