

## Installation


23 Bolt

21 Screw

20 Insert 19 Screw

17 Bar

1 Hose SDF80

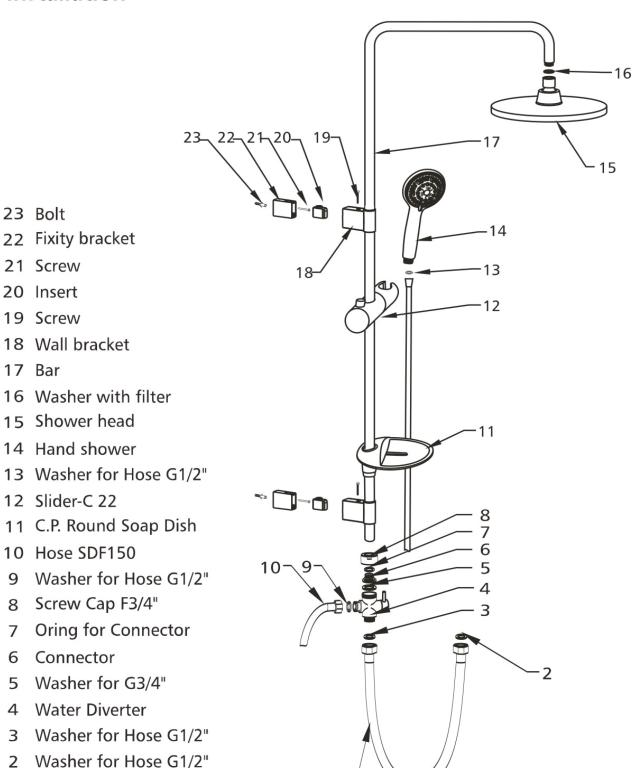


## **Dualex Riser Kit - 9626**



- > Fit rail brackets (18), Slider (12) and soap dish (11) onto rail (17)
- > Position brackets (18) in desired location and mark on wall




> Remove from wall and locate bracket (22) over marked position and mark screw hole and drill hole.

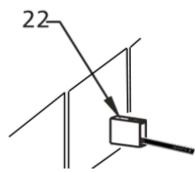




> Insert plug (23) and secure bracket (22) to the wall.

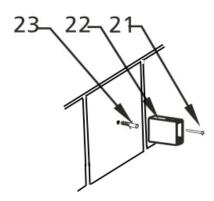

- > Ensure o ring (7) is fitted to brass insert (6)
- > Place nut (8) onto rail, thread facing down
- > Screw in brass insert (6) to bottom of rail using an allen key, ensure this is tight.

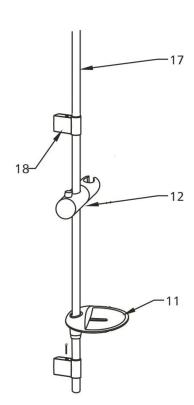





## **Dualex Riser Kit - 9626**

- > Place the rail assembly against wall, with bracket (18) fitted over the brackets secured to the wall (22)
- > When in position insert screw (19) and tighten rail to secure to wall.




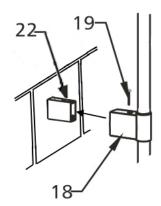

> Fit rubber washer (5) into rail nut (8), then connect diverter (4) to rail nut (8) and tighten

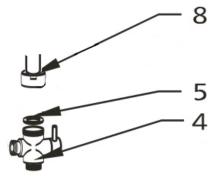

- > Fit rubber washers (9) into ends of short hose and connect to diverter and shower mixer
- > Fit rubber washers (1&2) into ends of the long hose and connect one end to the diverter and the opposite end (cone) to hand shower.

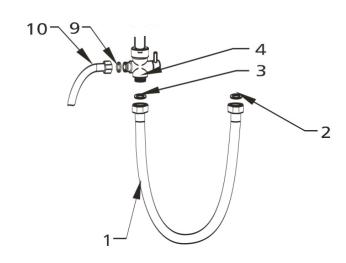

> Fit rubber washer (16) into inlet of shower head (15), then connect shower head to rail and tighten.

