


WETROOM SYSTEM



Flexible Waterproof Coating for Protection of Water Sensitive Backgrounds




1 Apply coating to the junctions between wall to floor and wall to wall corners using a paint brush or short pile roller at coverage 0.5kg/sqm.

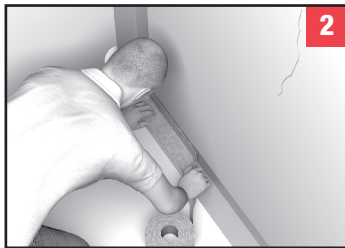

2 Bed a strip of membrane tape into the coating while still wet to strengthen and reinforce the junction points.



3 Immediately apply a further application of the coating to the bedded tape to encapsulate at coverage 0.5kg/sqm. Allow to dry for 2 hours.

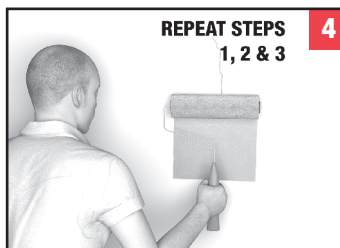

4 Repeat steps 1, 2 and 3 to repair and strengthen hairline superficial cracks in the body of the wall or floor. Allow to dry for 2 hours. Also repeat similar for boarded backgrounds along the joint between boards.



5 When dry, apply a uniform coating over the complete wall and floor area in a continuous layer at a coverage of 0.5kg/sqm using a paint brush or roller as previous. Allow to dry for 2 hours before applying a second coat to the same area at the same at coverage 0.5kg/sqm. Allow 24-48 hours drying before commencing tiling.

