
# **Basin Wall Hung and Pedestal Mounted** Installation and Maintenance

#### PLEASE READ THIS INSTRUCTION GUIDE FULLY PRIOR TO COMMENCING ANY PART OF THE INSTALLATION

IMPORTANT ! - This is a suggested method of installation to a solid wall, if the wall type is different you will require a different fixing type


(Fixings not supplied) Before commencing any installation check for wires and pipes will not be damaged during drilling Please refer to page 2 if fitting with a pedestal basin Screw Plastic Washer Nut alloho washer 2 3 Offer the basin to the wall, checking the basin is level. Drill the wall in the required location. Insert the wall plug into the drilled hole Insert the fixing bar and tighten into the wall If drilling into tile, it is recommended



1


4

Place the washers over the fixing bar as shown in the parts drawing, above




buvitdirect >

tap the plug to the finished wall surface




Connect the nut and tighten into position using a spanner

5

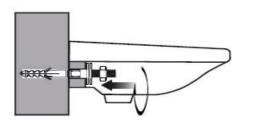

using a spanner or grips



6

Check basin is stable, seal along the back edge Leave to dry for at least 24 hours






## Basin Wall Hung and Pedestal Mounted Installation and Maintenance



#### PLEASE READ THIS INSTRUCTION GUIDE FULLY PRIOR TO COMMENCING ANY PART OF THE INSTALLATION

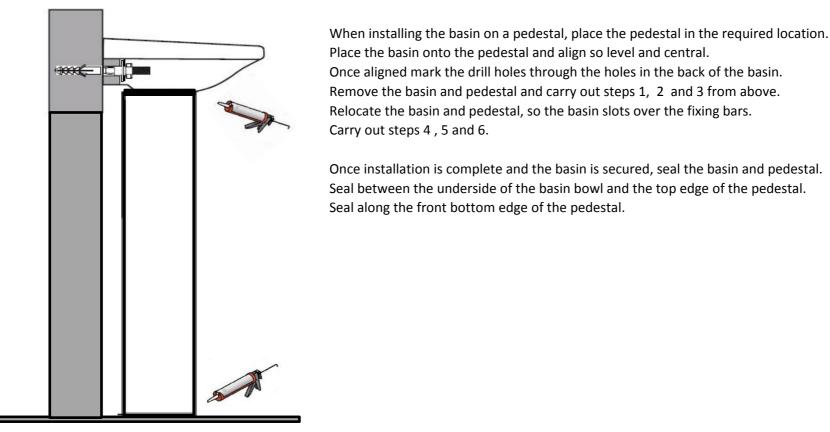

To maintain the surface finish of your product, wipe clean after every use, using a clean damp cloth, a mild detergent mixture can be used. Do not use abrasive cleaning agents/materials which can strip and scratch the surface, use of these agents/materials can invalidate your guarantee BASIN W/P - V1 - APR 19

### buyitdirect >