


# Wall Hung Basin Installation



Parts List	
Part	Qty
Wall Hanging Bracket	2
Wall Fixing	4

Tools Required
Drill
6mm Drill bit
Tape Measure
Pencil
Masking Tape

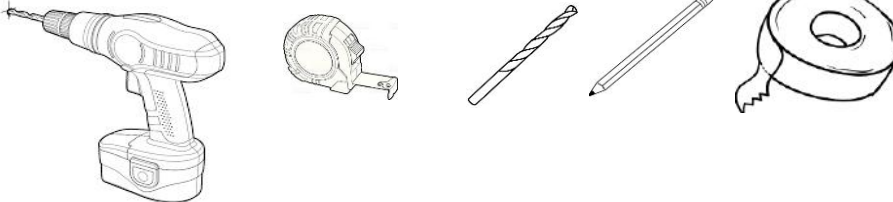

## Installation Check for pipes and wiring before drilling



Measure the centre dimension between the slots on the basin



Mask the wall where the installation is to be carried out, to protect the wall finish



Mark the centre dimensions on the wall



Drill wall to a depth of 12mm



Remove nut and washer from fixings



Insert the fitting into wall, leaving the thread exposed by 8 - 10mm



Place the bracket over the thread



Fit the washer and nut and tighten until secure



Hang the basin onto the brackets, silicone or adhesive can be used in conjunction with the fixings

## Maintenance

The basin and any chrome components should be cleaned using a soft damp cloth, no abrasive cleaning agents or materials should be used, as this can affect the surface finish.

Use of any abrasives can invalidate your guarantee.