


## Curved bath screen

### Packing List

Please carefully check the Packing List to ensure that all parts are included.

Curved Glass Screen Panel Assembly	1 pce	Wall Plugs	4 pces
Adjustable Wall Channel	1 pce	Large Screws	4 pces
Bottom Water Seal ( 730mm )	1 pce	Small Screws	4 pces
Stainless Steel Curved Rail (if supplied)	1 pce	Decorative Cap - Inner Screw Support Cup	4 pces
		Decorative Screw Cap	4 pces

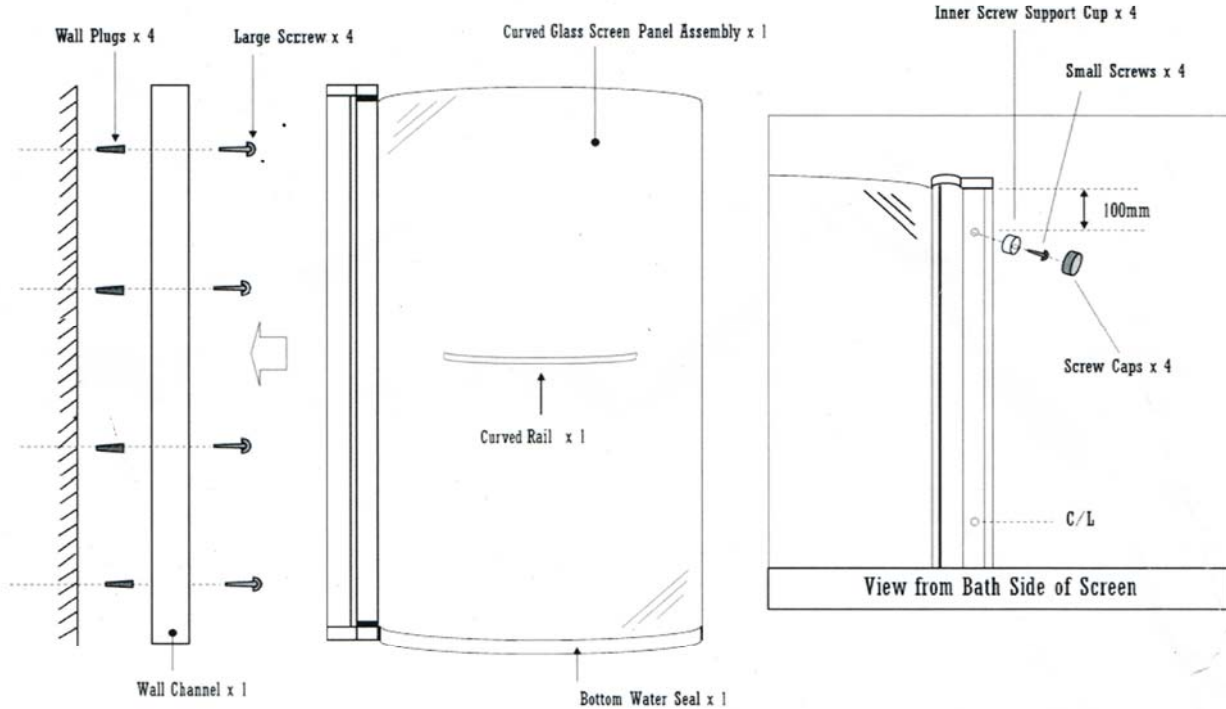

### Installation Steps :

1. Insert the Screen Side Pillar into the Wall Channel.
2. When the Bath Screen has been aligned, mark the position of the Wall Channel on the wall. Remove the Screen realign the Wall Channel and mark the Wall Channel Screw Hole positions on the wall.
3. Using a Masonry Drill Bit, Drill 4 holes in the marked Screw positions on the wall.
4. Insert the 4 x Wall Plugs into the holes. Using a Hammer knock them in until they are flush with the wall. PLEASE NOTE fixings supplied are suitable for solid walls ONLY.
5. Attach the Adjustable Wall Channel to the wall using 4 x Large Screws.
6. Insert the Side Pillar into the Wall Channel.
7. Adjust the position of the Bath Screen Assembly until it is Level ( Parallel ) with the bath.
8. From Inside of the Bath Screen Assy, Make a mark in the Wall Channel approx 100mm from the Top.  
Note: The Wall Channel Design, allows for Shower Screens to be adjusted so that they can be used on wall surfaces that are not vertical. When marking the hole position, please check to ensure that the drilled hole will go through both the Wall Channel and the Side Pillar.
9. Using a HS Twist Drill bit, Drill 1 Hole through the upper marked hole position. The hole must be drilled through the Wall Channel & Side pillar until it reaches the centre ( Do Not Drill right through both sides ).
10. Secure the upper section of the Wall Channel to Side Pillar by using 1 x Inner Screw Support Cup and 1 x Small Screw. ( Do Not Over Tighten )
11. Ensuring that the Bath Screen is still aligned as required, mark the position of the lower bath Screen Support Screw position approx 100mm from the bottom of the Wall Channel.
12. Repeat Items 9 & 10 for lower Bath Screen Support Screw position.
13. Mark the Centre support screw position approx equal distance between Top & Bottom Screws and Repeat Items 9 & 10.
14. Assemble the Screw Caps x 4 onto the Inner Screw Support Cups.
15. Fix the Curved Rail Set x 1 to Bath Screen through the holes in glass.
16. Fit Bottom Water Seal x 1 to lower edge of Screen.

