


Installation Step

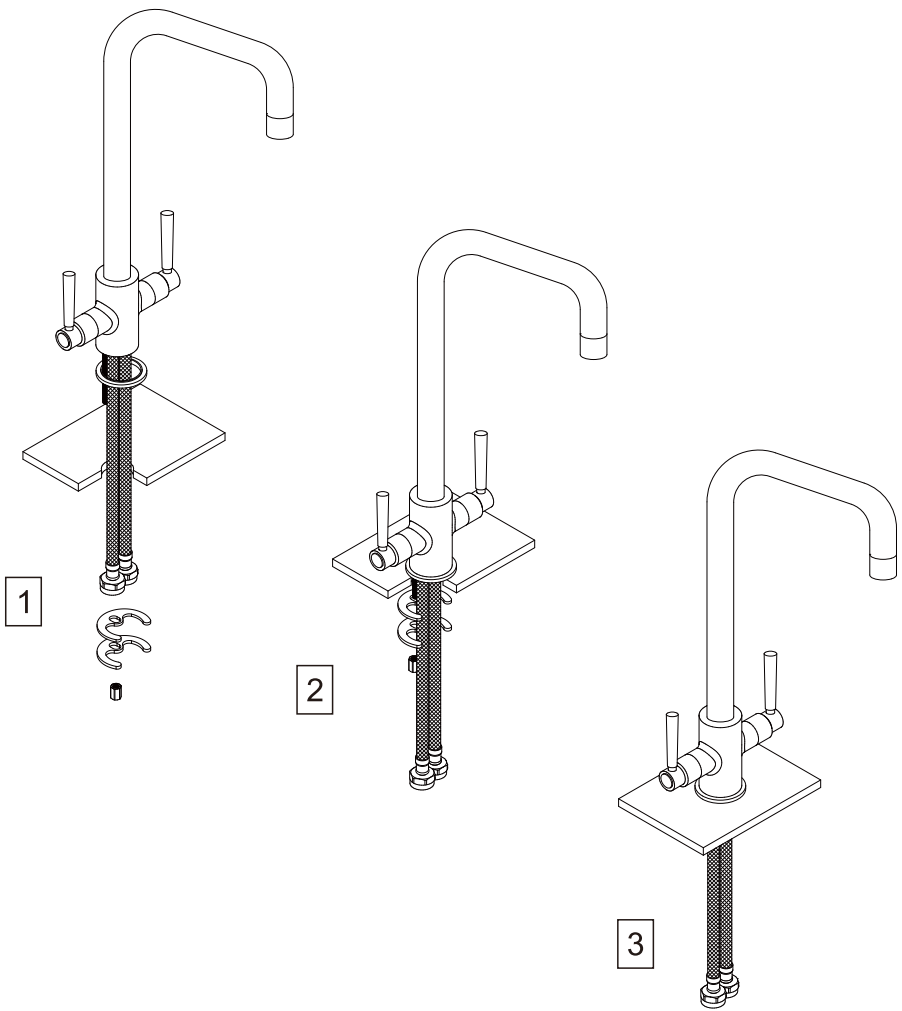

Troubleshooter Guide

Tap dripping for short period after closure: This is normal as the spout is emptying.

Tap dripping continually: Turn off the water supply, remove the flow control valve and clean and check internal seat for debris. No water coming through: Check pipes and inside of mixer for blockages.

Water not mixing: Pressures should be balanced or the higher pressure will restrict the lower.

Valves become stiff: Remove valves and clean out debris.

Cleaning

To maintain the surface finish of your product, wipe clean regularly, using a clean dampcloth and dry cloth to polish. Do not use abrasive cleaning agents or materials on the product surface as you may invalidate your guarantee. Should any harsh chemicals come into contact with the surface of the product during bathroom cleaning, rinse off immediately, wipe clean and dry.

For more information

- visit betterbathrooms.com
- email customerservices@buyitdirect.co.uk
- call 0330 390 3062
- write to Trident Business Park, Neptune Way, Huddersfield, HD2 1UA

**better
bathrooms**

Part of the BuyItDirect Group


USER MANUAL

Thank you for choosing Better Bathrooms.
Please read this manual before installing your product
and keep for future reference.

**better
bathrooms**

Product name

TWO HANDLES KITCHEN MIXER
ELWDLCHSQ/ELWDLMBQ/ELWDLBBSQ/ELWDLABSQ

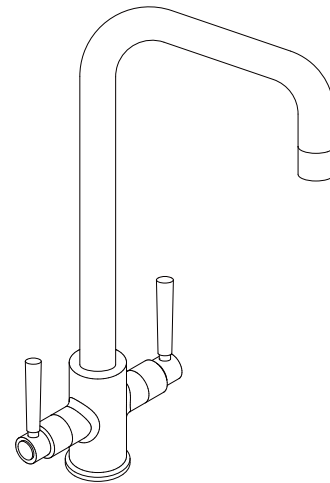

- **Single person assembly**
- **Tools required**
- **We always recommend using professional tradespeople to install your product**

V1 22.05.26

Important information

- Please read these instructions thoroughly and retain for future reference
- Pressures should meet minimum stated on the website
- Pressures must be balanced for optimum performance
- Always check for pipes and cables before drilling

Water Pressure:

We recommend a minimum water pressure of 0.5 Bar and a maximum of 3 Bar to ensure efficient operation of your product.

Flow rate :

MODEL:	0.5(bar)	1(bar)	2(bar)	3(bar)
ELWDLCHSQ	6.3	8.5	12.2	14.5
ELWDLMBQ	6.3	8.5	12.2	14.5
ELWDLBBSQ	6.3	8.5	12.2	14.5
ELWDLABSQ	6.3	8.5	12.2	14.5

Installation Guide

Follow these instructions before fitting the tap detailed in this guide

Prior to installation, please check that your plumbing system is adequate and that all pipes have been sufficiently flushed through.

The installer should open supply pipes in the house and empty the water into a bucket to clear any debris before the tap is fitted.

1. Turn off the mains cold water supply. The mains stopcock is usually found where the supply enters the building.
2. It is also recommend that any hot water heating systems are turned off.
3. Drain the hot and cold water systems. To ensure complete drainage, open all taps
4. Position the tap over the hole, ensuring the rubber seal is positioned properly between the tap body and the sink. Or in the case that the product includes a base plate ensuring the rubber seal is between the base plate and the sink.

5. Screw the short threaded bar(s) into the hole(s) on the underneath of the body.

6. From underneath the sink place the rubber horseshoe washer over the fixing bar, followed by the metal horseshoe plate.

7. Next, screw the flexi tails in to each of the other holes (ensure these are screwed in firmly). Please make sure the threaded bar(s) are fully through sink hole. Please also note the connector has linked correctly, the cold supply must be on the right and hot supply on the left.

Please note that the flexi-tails should not be tightened using a spanner, as this can damage the O ring.

8. To comply with water regulations, isolating valves should be fitted in the pipe work beneath the tap. This enables each supply to be independently isolated which makes it easier to service or remove the tap. Isolation valves are not supplied. Once all the connections are made, the mains water supply can be turned back on and the system refilled.

9. Now check for any leaks. All water heating systems may now be turned on.

Diagrams

